



# INSTALLATION INSTRUCTIONS


Including

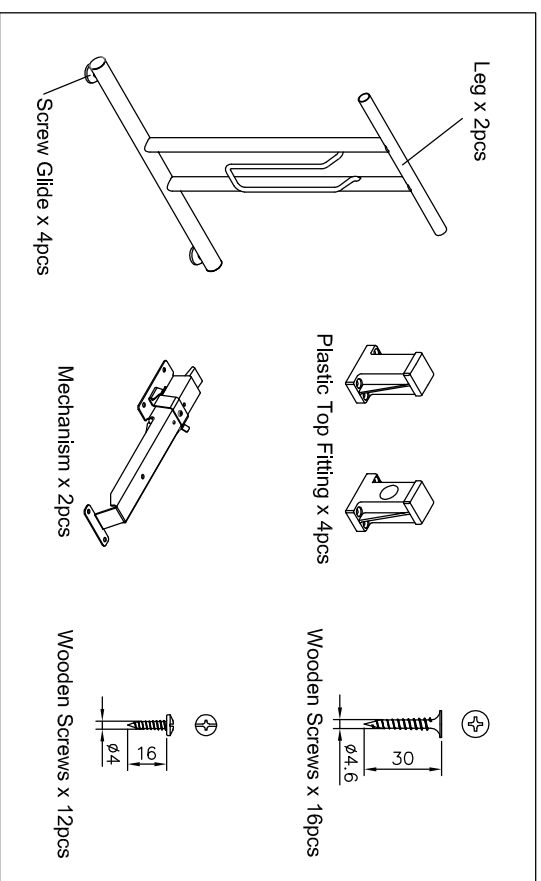


## Step 2

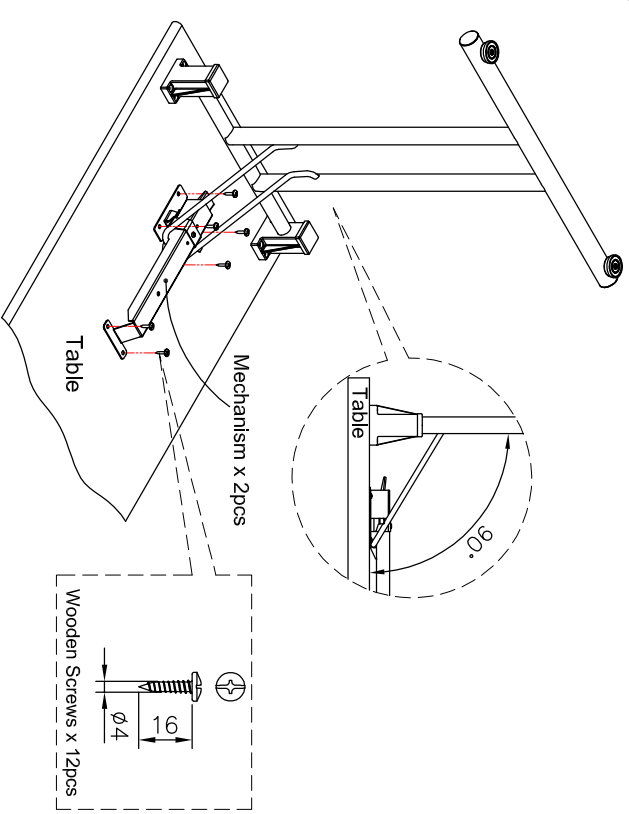

## Step 1

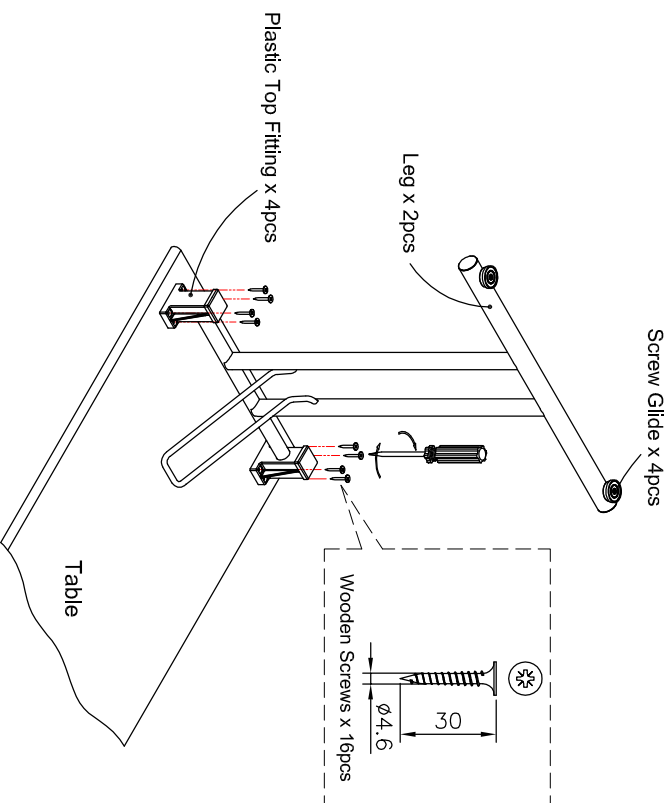

## Step 3

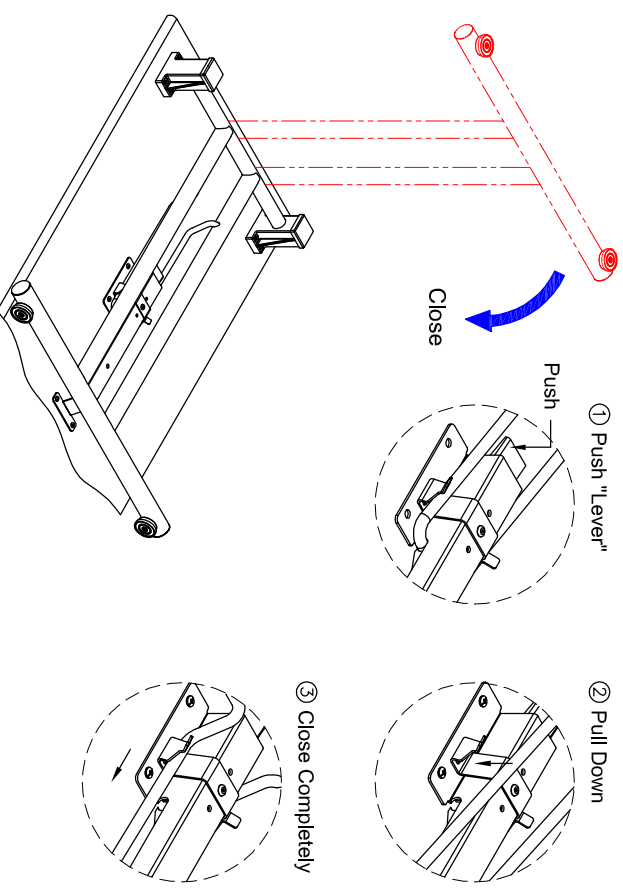

★ **Caution:** Make sure to push "Mechanism Lever" before pulling down the frame to closed flat position.